PMID705X: User Manual

08/30/2012

FRONT

Polaroid 7" Internet Tablet

Camera | Capacitive Touch Screen | Android 4.0

In the box

Location of controls

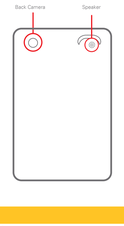

Basic operation

Charging the battery:
Connect the tablet to a wall outlet using the included AC adapter.



The tablet may also be charged by connecting it to a computer using the USB cable, however, it will take much longer to fully charge.

Battery Tips:
- *Turn off Wi-Fi when it's not in use.*
- *Lock the tablet the display is off to shorten charging time.*
- *To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.*

Turning on the tablet

Unlock (enter) the tablet

Look (standby) the tablet
To lock or unlock the tablet, briefly press the button.Look the device to conserve the battery.

Turning off the tablet
For quick power-off, you can select the "Power" button on the Polaroid Settings widget to turn off the tablet.

Press the Power button, and the Power off dialog appears.



Home screen

On the Home screen, you can place app shortcuts and widgets.

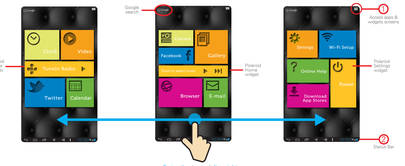
Home screen (left)
Polaroid Media widget
Home screen (center)
Polaroid Home widget
Home screen (right)
Polaroid Settings widget
Access apps & widgets screens
Swipe the screen left or right to access other Home screens.

1 Access apps & widgets screen
Press to access the Apps & widgets screens.

Press the icon to return to the Home screen.
Apps screen
Swipe the Apps & Widgets screen left or right to access more apps and widgets.
Widgets screen

Placing apps & widgets on the Home screen
Press & hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets
Press and hold the app or widget and slide it as shown below.

You can always bring the widgets back from the Widgets screen.

Connecting to Wi-Fi & downloading apps

2 Status Bar
The Status Bar is available on all screens and apps of the tablet.

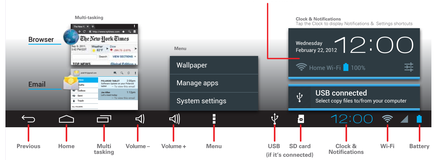

Setting up Wi-Fi
To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

To set up Wi-Fi, use the "Polaroid Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid Settings widget.

2. Select "Wi-Fi Setup".

3. Select a network.

4. If required, enter the correct password and select "Connect".

Select "Show password" to avoid mistakes.

5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Camera and video chat

Front facing camera
Select on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in, front facing camera.



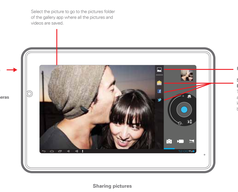
Select the picture to go to the pictures folder of the gallery app where all the pictures and videos are saved.
Return to camera mode
Share pictures to Email, Facebook or Twitter:
To utilize this feature you must have a Facebook or Twitter account and be logged in, for Email, an account must be set up for this option to appear.
Sharing pictures

Video chat
Use the built-in, front facing camera to video chat with friends and family.
There are many different services that offer video chat, which are available on the apps.

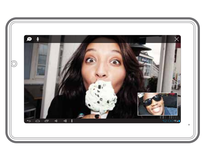

Downloading an App Store

To access a large library of free/paid apps and games, you need to download an app store. We have selected links to the most popular Android apps for each store sold by selecting the "Download App Stores" option on the Settings widget.

1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Polaroid Settings widget.

2. Select an app store, and follow the instructions to download and install it on the tablet.

3. Click here.

4. Select the downloaded app store (.apk file) from the Pop-up window.

5. Select "Install" to install the app.

6. The app store appears on the Apps screen.

Downloading and installing apps:
After downloading the selected app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Note: Apps compatibility / games:
There are many apps available on the various app stores, but unfortunately not all will be compatible with the tablet. This is because some of the apps are designed for mobile phones and require functions or specifications that are not supported by the tablet. We recommend always searching for the free or "Lite" version of an app and testing it before purchasing the paid app.

**Avoid apps that require rear camera or GPS as these apps will not be supported by the tablet.*

The tablet supports many game apps - however we recommend always testing the free version (if available) before purchasing.

Note: Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon or the Amazon appstore.

Games
Sometimes, while playing games, the gyrosnor on the tablet may cause the screen to rotate and the game may become uncontrollable. To correct this problem, follow the steps below:

1. Open "Settings."
2. Select "Display."
3. Select "Accelerometer Coordinate System."
4. The default setting is "Default Coordinate System." This setting should work for most games.
5. In case your game is not functioning properly, select "Special coordinate system to support some other games".

BACK

Web browsing

Select "Browser" on the Home or Apps screen (you must connect to Wi-Fi before accessing the web).

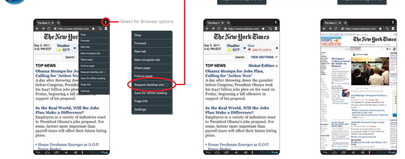

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).

Click to access Email settings

Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.

Viewing pictures:
Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Share pictures to Email, Facebook or Twitter:
To utilize this feature you must have a Facebook or Twitter account and be logged in, for Email, an account must be set up for this option to appear.

- Share: Share the selected picture through Email, Facebook, or Twitter.
- Trash: Delete the selected picture
- Menu: Slideshow, edit and more

Watching videos:
While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Conserve Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Tips: *Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet - this will conserve the internal memory, and allow you to download more apps.*

Inserting Micro SD card
The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet:

1. Insert the card face up into the card slot until it clicks and locks into place.

2. Once the card is mounted, the card icon appears on the Status Bar.

3. To access the Micro SD card, select "File Manager" from the Apps screen.

Unmount & remove the Micro SD card:

1. Open "Settings."
2. Select "Storage."
3. Select "Unmount Micro SD card."
4. It is now safe to remove the card from the tablet.
5. To remove the card, gently push it in until it pops out.

Tip: *SD card can only be inserted one way - do not use force when inserting the card.*
- *Make sure to unmount the card before taking it out of the tablet.*

Connecting the tablet to a PC or Mac:

1. Connect the included USB cable to the "USB port" of the tablet and USB port of the computer.

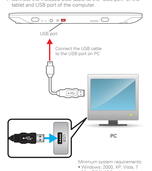
USB port
Connect the USB cable to the USB port on PC
PC
Minimum system requirements:
• Windows: 2000, XP, Vista, 7
• Mac OS X: 10.5 or later (with USB connection)

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

USB connected
Select copy files to/from your computer
TURN ON USB STORAGE
Press to proceed
Previous to exit the USB connect screen
USB Connected screen

Note: *While connected to the computer, you can also access the "USB connected" screen from the Status Bar as shown below.*

3. The "Autoplay" window appears on your computer's display select "INTERNAL" to view and manage files on the tablet, or if a Micro SD card is inserted, select "Removable Disk" to manage files on the card.

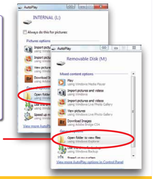
AutoPlay
Removable Disk (M:)
Open folder to view files
Select an AutoPlay option
"Removable Disk" window appears if a Micro SD card is inserted

Browsing files

4. Copy media files from your computer to the Micro SD card.

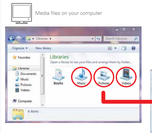

Tips: *Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.*

5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

File Manager:
To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" on the Apps screen.

Briefly press a file or folder to open it.

2. Select a file or folder.

Copy, move or delete a file or folder:
1. Press and hold a file or folder until the options window appears, then select an option from the options window.

3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Multimedia

Use the tablet to store and play music, pictures and video files.

Music
Access music files stored on the tablet.

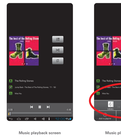

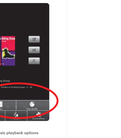

Settings

Settings app:
Select and customize the options in "Settings" to change device performance, manage applications, manage Wi-Fi, change display options, set passwords and more.

Online help

Select "Online Help" on the Apps screen to access:
- App stores
- Firmware updates
- Technical support
- Product registration

Software updates

Your tablet is capable of receiving OTA (over the air) updates. The tablet is set to automatically check for updates, and will notify you when there is an update available.

Manually check for updates
To manually check for updates, follow the instructions below: (You must connect to Wifi before checking for updates)

1. On the app screen, select "Settings"
2. Under the "System" tab, select "Software update"
3. Select "Update" to manually check for OTA updates

Resetting

In the event that the tablet freezes or does not function properly, try connecting the problem by pressing the RESET button located on the back panel (shown) below.

Use a paper clip or the tip of a stylus to press the RESET button. Data stored on the tablet will not be affected by using the RESET button.

Restore

If the problem persists it may be necessary to restore the tablet to the factory default settings:

1) Select "Settings" from the Apps screen.
2) Select "Backup & reset"
3) Select "factory data reset" this will erase data stored on the device so make sure to back up your data prior to using this option.

Specifications

- Operating System: Android 4.0 Ice Cream Sandwich
- Processor: ARM CORTEX-A8
- Processor Speed: 1GHz
- RAM: 512MB DDR3
- Graphic Accelerator: OpenGL ES 2.0 (3D game support)
- Memory: - Internal Memory: 4GB
  - External Memory: Micro SD card slot
- Display: 7" capacitive multi-touch screen
- Display Resolution: 800X480 (16:9), 4 way auto rotation
- Cameras: 0.3MP Front camera
  2.0MP Rear camera
- Network: Wi-Fi 802.11 b/g/n)

* Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.*

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLRI Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you purchased the product. Please contact your dealer or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to help prevent the unauthorized access to your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty Period").

In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a daytime telephone number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value, if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLRI IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE, BUSINESS SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
1-877-765-8461 (Toll Free)
polaroidtablets.support@southerntelecom.com

Monday - Friday: 8AM - 10PM (EST)

Polaroid